


SECTOR SEVEN

by *PRO MOTO BILLET*

REAR CAMERA SPACER MOUNT FOR POLARIS RZR PRO-R

1. Remove OE Trunk to access behind OE Rear Camera.
2. Unplug OE Rear Camera.
3. Remove OE Rear Camera by pressing spring clips.
4. Cut Paper Template and place over OE Rear Camera location. (Fig. A)
5. Drill Two 5mm holes through template crosshairs.
6. Clean plastic area of any debris.
7. Apply double sided tape to S7 Rear Camera Mount. (Fig. B)
8. Insert OE Rear Camera into new S7 Rear Camera Mount. (Fig. C)
9. From backside, use supplied screws to fasten S7 Rear Camera Mount. (Fig. D)
10. Plug in OE Camera Mount.
11. Zip-Tie or Fasten loose Camera wire to supporting metal.
12. Re-Install OE Trunk.
13. Enjoy the new View when you reverse!

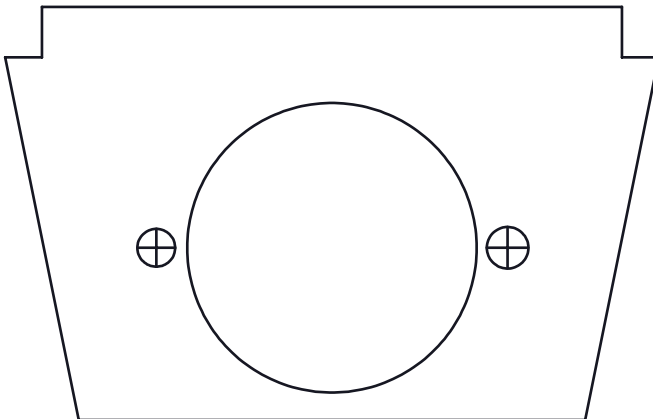


PRINT AND CUT TEMPLATE (DO NOT SCALE!)


Place top of Template to this Line on the Plastic. Center template left to right, over OE Rear Camera opening.

Drill Two 5mm Holes, located on the Crosshairs of the Template.

Optional - Skip drilling step, and only use double sided tape. Be sure to zip-tie OE Rear Camera Wire to inner support.

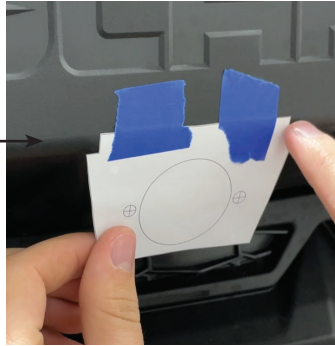

(Fig. A)

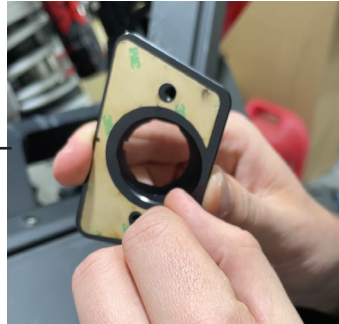

(Fig. B)



(Fig. C)



(Fig. D)